

### *How do I clean my fixture?*

Before starting, be certain the electric current is turned off before cleaning.

- **Polished Metal, Painted Fixtures and Glass**
  - Remove any glass shades and hand wash them.
  - Dry polish and dust all metal, painted and wood parts.
  - Dry fixtures and glass thoroughly with a lint-free cloth; this is particularly important on textured glass finishes as they tend to catch lint easily. You can also let the glass air dry.
- **Things To Avoid**
  - Glass is not dishwasher safe and we recommend only hand washing.
  - Avoid abrasive cloths or cleaners and products with ammonia or alcohol - this includes metal polish.
  - Stay away from general purpose household window or glass cleaners – these types of cleaners could damage the coating on the fixture.
- **Other Fixture Maintenance**
  - LED Tape Lighting Care: Use a dry cloth to clean unless covered by a lens, whereby a slightly damp cloth can be used.
  - Downlights, Recessed, and Ceiling Fixtures Care: a slightly damp cloth can be used on the acrylic diffuser, followed by a dry cloth.
  - Ceiling Fans Care: Finishes and glass can be cleaned in the same manner as decorative fixtures. However, you will want to take extra precautions to ensure no moisture or cleaning products enter the vent openings of the motor housing; we suggest using a dry cloth around this area.
  - Landscape Lighting Fixtures: Clean the fixture to remove all debris and use gentle soap and water if you need to. Calcium, Lime & Remover (CLR®) can be used to remove lime deposits from lenses.