




GENERAL INSTALLATION INSTRUCTIONS

Corner Tray

PREPARATION

- Tools Required for Assembly: (Not included)
- Pencil
 - Electrical drill
 - 1/4" Masonry drill bit (for tile anchor)





- Phillips head screwdriver
- Tape measure
- Level
- Safety glasses

INSTALLATION INSTRUCTIONS

Tiles

CAUTION: Tile anchors are for tile, granite, marble, cement surfaces only. Use drywall anchors for drywalls only.

1. Unscrew cap to reveal screw holes shown in Fig. 1.
2. Hold the item up against desired position on wall, and mark the screw holes. Use a measuring tape and a level for accuracy.
3. Remove the item and drill pilot holes into the tiles where the tile anchors will be inserted using 1/4" Masonry drill bit.
4. Insert tile anchors into the hole.
5. Place the item over the tile anchors and place mounting kits in the order shown in Fig. 2. Tighten screw, then tighten cap over the screw.

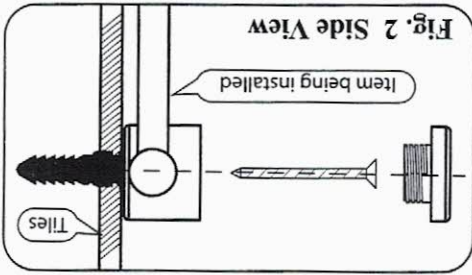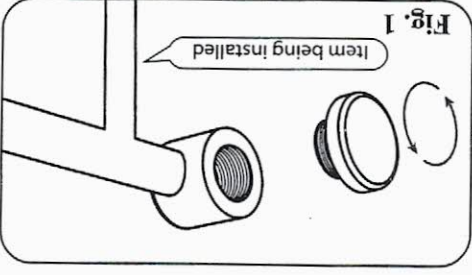

Care and Maintenance

To maintain the beautiful luster finish, please use soft damp cloths when cleaning and never use any cleaning solvents.