


ITEM NO: M70075NB M70075BN M70075MBK

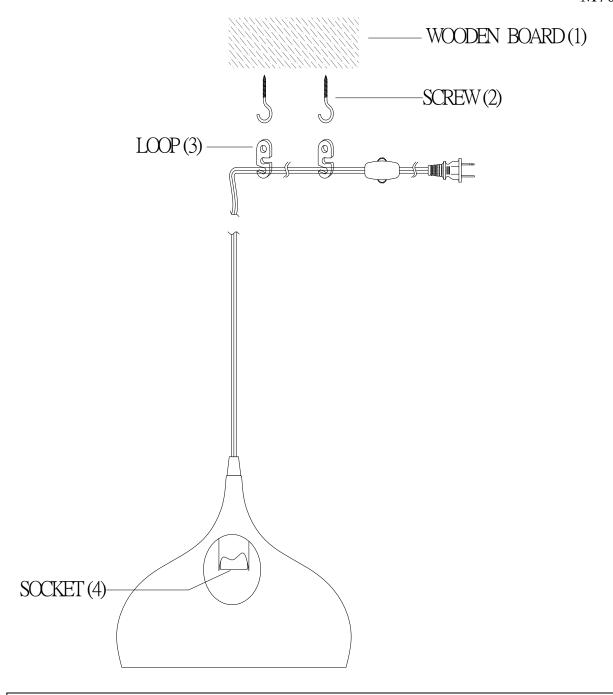

INSTALLATION INSTRUCTIONS

- 1. Carefully remove the fixture out of the carton, and check that all parts are included referring to the above illustration. Make sure not to misplace any parts that are needed for the installation;
- 2.Install the screw (2) into the wooden board (1).
- 3.Install the loop (3) into the screw (2).
- 4. Stall the wire onto the loop (3).
- 5. Fixture is ready for lamping and installation.