


## **INSTALLATION INSTRUCTIONS FOR FRAMELESS WALL MIRRORS**

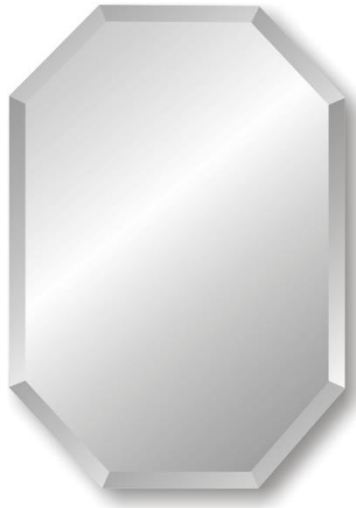

### **TOOLS NEEDED:**

PENCIL, LEVELER, DRILL, POSSIBLY MOLLY TYPE WALL ANCHORS

1. MEASURE THE WALL SPACE WHERE YOU PLAN TO HANG MIRROR USING A RULER OR TAPE MEASURE.
2. COMPARE MEASUREMENT OF YOUR WALL MIRROR TO MAKE SURE IT WILL FIT ON WALL PROPERLY WHERE YOU PLAN TO HANG IT.
3. PUT A SMALL MARK ON THE WALL WITH PENCIL TO INDICATE WHERE YOU WANT TOP OF MIRROR TO BE.
4. LOCATE ATTACHED BONDED HOOKS ON BACK OF MIRROR.
5. MEASURE DISTANCE BETWEEN CENTER OF HOOKS AND DRILL HOLES INTO WALL. INSERT PLUGS AND SCREWS IF SUFFICIENT FOR YOUR WALL OR USE MOLLY TYPE WALL ANCHORS.
6. ATTACH MIRROR TO WALL BY SLIPPING HOOKS OVER SCREWS INTO WALL AND SECURE.
7. PEEL BACK AND REMOVE TAPE ON ADHESIVE BUMPER FOR FLUSH FIT.
8. CLEAN MIRROR WITH REGULAR GLASS CLEANER TO REMOVE ANY FINGER PRINTS.