


te Requirect: Flathaed acrescitiver, Phillips screwchiver, pliers, wire culters, wire strippers, electrical teps, safety glasses. It is Seures: (1) 1207 LED 1904 DIMANSIE (4000K)
Instaled Assembly Time: 10-20 minutes
paradient Identify Time: 10-20 minutes
and. If any parts are minuting or damaged, do not effempt to assemble, helial, or operate the thicker. Contact customer services for replacement.

Warnings and Cautions

We strongly recommend that a licensed, profes Turn off electricity at circuit breaker or main flase box before installation. Consult a licensed electricism if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fidure. We strongly recommend that a licensed, professional electricism perform the installation.

Disconnect fixture from power source before replacing bufbs. Make sure bufbs are given sufficient time to cool before removal

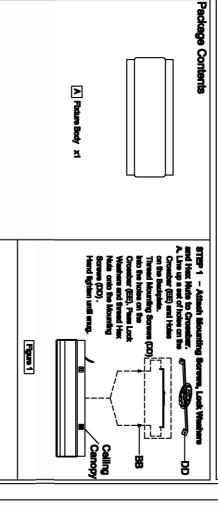

Supply Wires with Outlet Bax Screws Ground Wire ecure it with Outlet Box supply wires through the Crossbar (DD).

Crossbar (DD) to the Outlet Box (CC) en Ground Screw facing you 6 **Outlet Box**

À

8

200 2pos

8

8

Electrical Marrets Outlet Box Screw

Mounting Screw

8

PART

DESCRIPTION QUANTITY

Hardware Contents

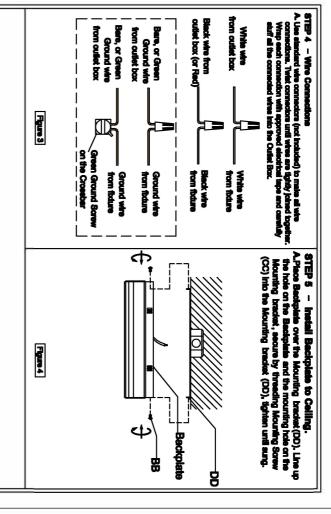


Figure 2